Help Line

Australia	+ 1-800-33-11-77
Canada	+ 1-800-665-4339
México	+ 1-800-234-1185
United States	+ 1-800-955-0959

Fellowes

Australia	+ 61-3-8336-9700
Benelux	+ 31-(0)-76-523-2090
Canada	+ 1-905-475-6320
Deutschland	+ 49-(0)-5131-49770
France	+ 33-(0)-1-30-06-86-80
Italia	+ 39-071-730041
Japan	+ 81-(0)-3-5496-2401
Korea	+ 82-2-3462-2884
Malaysia	+ 60-(0)-35122-1231
Polska	+ 48-(0)-22-771-47-40
España	+ 34-91-748-05-01
Singapore	+ 65-6221-3811
United Kingdom	+ 44-(0)-1302-836836
United States	+ 1-630-893-1600

www.fellowes.com

Fellowes **1789 Norwood Avenue, Itasca, Illinois 60143-1095 • USA• 630-893-1600**

http://www.fellowes.com

Australia Benelux Canada China Deutschland España France Italia Japan Korea Polska Singapore United Kingdom United States

© 2007 Fellowes, Inc. Part No. 401950

Fellowes

THE WORLD'S TOUGHEST SHREDDERS™

MS-460Cs

Please read these instructions before use.

ENGLISH

Model MS-460Cs

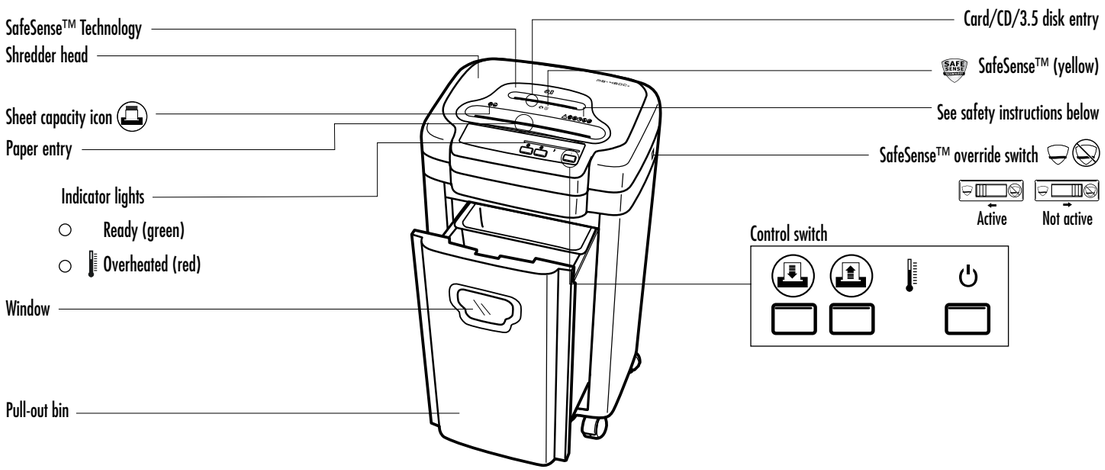

Breakthrough Safety Technology! SafeSense™ stops shredding when hands are too close to the opening.

SET UP

Insert waste bag (Fellowes #36052) for easy disposal.

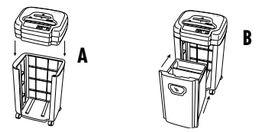

— To Test SafeSense™ Technology

CAPABILITIES

Will shred: Paper, credit cards, CD/DVDs/3.5 disks, staples and small paper clips

Will not shred: Continuous forms, adhesive labels, transparencies, newspaper, cardboard, large paper clips, laminates or plastic other than noted above

Paper shred size:
Confetti-Cut ..... 5/64" x 5/16" (2 x 8mm)

Card/CD shred size:
Strip-Cut ..... 5/16" (8mm)

Maximum:
Sheets per pass (Confetti-Cut) 10*
Cards/CDs per pass 1
Paper width ..... 8.75"/222mm
Card/CD width ..... 5"/125mm
Continuous operation ..... 10-12 minutes

*20lb., 8.5"x11" (75g) paper at 120v, 60 Hz, MS-460Cs–5.8Amps; heavier paper, humidity or other than rated voltage may reduce capacity. Recommended daily usage rates: 50-100 paper passes; 50 cards; 15 CDs/3.5 disks.

IMPORTANT SAFETY INSTRUCTIONS — Read Before Using!

⚠WARNING

- Keep away from children and pets. Keep hands away from paper entry. Always unplug when not in use.
- Keep foreign objects – gloves, jewelry, clothing, hair, etc. – away from shredder openings. If object enters top opening, switch to Reverse (R) to back out object.
- Never use aerosol, petroleum based or other flammable products on or near shredder. Do not use canned air on shredder.
- Do not use if damaged or defective. Do not open shredder head. Do not place near or over heat or water source.
- 10 sheets per pass to avoid jams.

⚠CAUTION

- Avoid touching exposed blades under Confetti-Cut shredder head.
- Use only designated entry for cards/CDs/3.5 disks. Keep finger away from CD hole.
- The grounded socket-outlet shall be installed near the equipment and shall be easily accessible.
- Paper and Card/CD/3.5 disks cannot be shredded at the same time.

OPERATION

Continuous operation:
10-12-minute maximum

NOTE: Shredder runs briefly after each pass to clear entry. Continuous operation beyond 10-12-minutes will trigger a cool down period to resume operation.

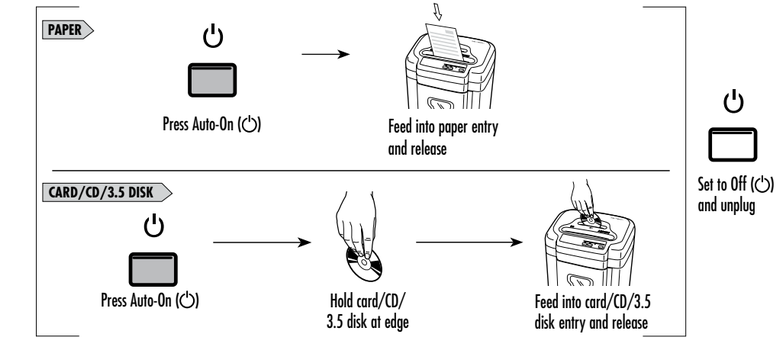
Set to (⏻) and plug in
PAPER
Press Auto-On (⏻)
Feed into paper entry and release
CARD/CD/3.5 DISK
Press Auto-On (⏻)
Hold card/CD/ 3.5 disk at edge
Feed into card/CD/3.5 disk entry and release
Set to Off (⏻) and unplug

TROUBLESHOOTING

Paper jam: Set to Off (⏻) and empty bin. Replace bin and follow any or all of the below procedures.

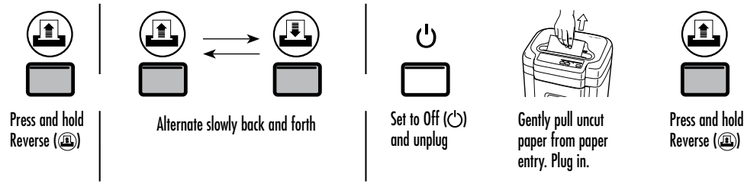
Press and hold Reverse (R)
Alternate slowly back and forth
Set to Off (⏻) and unplug
Gently pull uncut paper from paper entry. Plug in.
Press and hold Reverse (R)

Indicator lights:

- ☼ Yellow - SafeSense™ active
- ☼ Yellow flashing - SafeSense™ not active
- ○ Make sure bin is pushed in
- ☼ 🌡 Wait for motor to cool down

ATTENTION: If the SafeSense™ light remains on, you must engage the **Override Switch** in order to perform steps above. Once the jam is cleared, reset the SafeSense™ feature. (See SafeSense™ instructions below.)

☼ **SafeSense™ paper jam:** If the SafeSense™ feature activates (SafeSense light remains on) to cause the user to think the shredder has jammed when it has not, use the **Override Switch** to deactivate the SafeSense™ feature and clear the paper. **Warning** – when switch is in override position, the SafeSense™ light will flash and the SafeSense™ feature will NOT function. Once the paper is cleared, reset the SafeSense™ feature.

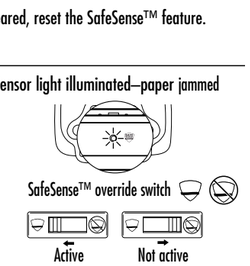

MAINTENANCE

Run regularly in reverse for one minute

Oil when bin is full, or immediately, if:
- Capacity decreases
- Motor sounds different, or Shredder stops running

Follow oiling procedure below and repeat twice.



⚠CAUTION ***Only use a non-aerosol vegetable oil in long nozzle container such as Fellowes 35250***

WARRANTY

LIMITED WARRANTY Fellowes, Inc. ("Fellowes") warrants the cutting blades of the machine to be free from defects in material and workmanship for 7 years from the date of purchase by the original consumer. Fellowes warrants all other parts of the machine to be free of defects in material and workmanship for 1 year from the date of purchase by the original consumer. If any part is found to be defective during the warranty period, your sole and exclusive remedy will be repair or replacement, at Fellowes' option and expense, of the defective part.
This warranty does not apply in cases of abuse, mishandling, or unauthorized repair. ANY IMPLIED WARRANTY, INCLUDING THAT OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED IN DURATION TO THE APPROPRIATE WARRANTY PERIOD SET FORTH ABOVE. In no event shall Fellowes be liable for any consequential or incidental damages attributable to this product.
This warranty gives you specific legal rights. The duration, terms, and conditions of this warranty are valid worldwide, except where different limitations, restrictions, or conditions may be required by local law.
For more details or to obtain service under this warranty, please contact us or your dealer.

MS460Cs.3NA.401950.022707.indd 3-4
2/28/07 10:20:34 AM